

FREEZE WARNING

45°F / 7°C

Wait 24 Hours



BEFORE OPERATING your portable hand-washing station allow it to warm up to room temperature for at least **24 hours** due to potential freezing of the pump/heater components while in transit during cold weather.

DO NOT store your portable sink in temperatures less than 45°F or 7°C, this will cause pump failure and void the warranty.

Set-Up Instructions

Complete Owner's Manual Located Inside Cabinet Door

Ozark River
Portable Sinks™

- 1 Check for damages after removing the sink from carton. Keep packaging for two weeks in event of product return.



CHECK FOR DAMAGES!

DO NOT set-up your sink if you find any damages CALL 1-877-841-3422.

- 2 Place sink on level surface. Push faucet handles back into OFF Position. (FIG 1.)
- 3 Locate GFCI Outlet Box with ON/OFF Switch inside of cabinet. Switch to OFF (down) position. (FIG 2.)

- 4 Remove WATER TANKS from cabinet. FRESH WATER TANK has the QUICK CONNECT™ cap. If QUICK CONNECT™ is attached to sink, push button to release and then remove the tank. (FIG. 3)



DO NOT PLUG sink electrical plug into wall outlet at this time.

(FIG. 1)




(FIG. 2)



(FIG. 3)



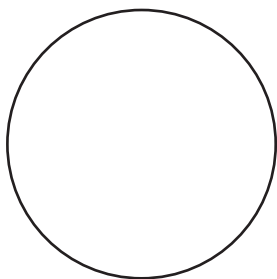

- 5** Fill FRESH WATER TANK with clean water from your tap, or another source of potable water.

! CAUTION !

Extremely hard water will cause excessive scale build-up and cause heater malfunction and void warranty. Another potable water source may need to be used.

! CAUTION !

Low water levels in FRESH WATER TANK may cause damage to pump/heater system.

- 6** Secure Quick Connect™ cap onto full FRESH WATER TANK. DON'T over tighten. Place tank into cabinet. (FIG. 4)



FIG. 5



FIG. 6

- 7** Connect FRESH WATER TANK using the QUICK CONNECT™. You should feel it click into place. (FIG. 5 and 6)



FIG. 7



FIG. 8

- 8** Position WASTE WATER TANK under drain tube. Make sure drain tube is inserted into hole at top of tank. (FIG. 7 and 8)

! NOTICE !

Drain tube lengths vary depending on model. Child height sink has only a buffer tube. Fig. 7 (Standard) and Fig. 8 (Child)

! WARNING !

Wipe up all standing water from floor surrounding your sink to prevent accidental slipping and possible injury.

! CAUTION !

Sink cabinet is water resistant. Keep cabinet dry at all times to prevent mold.

**Call Ozark River's
Tech Support
Toll Free 1-877-841-3422**

For Sink Operation:

Refer to **Owner's Manual** located inside sink cabinet for **General Sink Operation and Troubleshooting.**

Ozark River

Portable Sinks™